

### **BEFORE OPERATING 13 kW Generator**

1. Check fuel levels / fill fuel tank
2. Check for fuel leaks.
3. Check to make sure the fuel filter / water separator fuel cock is in the ON position.
4. Check oil levels
5. Check for engine oil leaks,
6. Check for engine coolant / top off if needed.
7. Check for any coolant leaks.
8. Check hoses for cracks, abrasions, and damaged, loose or corroded / compromised connectors.
9. Check for damaged or missing parts.
10. Check for loose, missing or damaged fasteners.
11. Check the electrical harnesses for cracks, abrasions, and damaged or corroded connectors.
12. Check for floating neutral = No conductivity between neutral output post and generator frame (ground terminal if present).
13. Check battery terminal for corrosion.
14. Check battery connections are secured.